

Contact Information:
 support@precisionqp.com | (469)942-7824



Visit the PQP Website to
 View More Products


2500X Actions

Muzzle Tuners




and more!
 PrecisionQP.com

REAR ONLY MECHANICAL REST

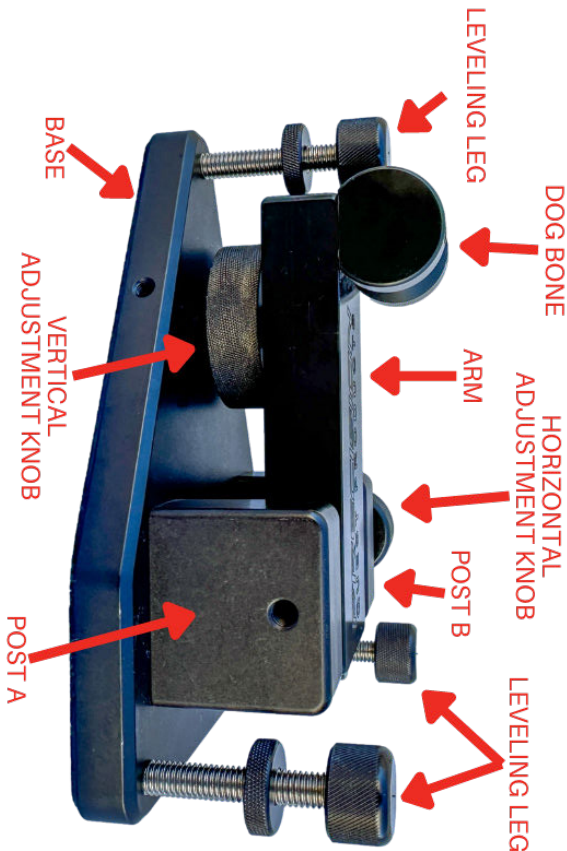

Online Resources

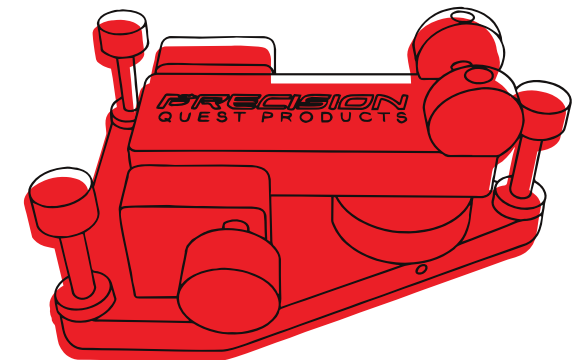


Thank you for your purchase of the
 Rear Only Mechanical Rest.

Tools needed for assembly and adjustments:
 1/8" allen key

Here is what's in the box:
 Rear Mechanical Rest and 3 Leveling Legs.

Assembly Instructions

Place the three leveling legs into the three holes at the corners of the base as shown below.

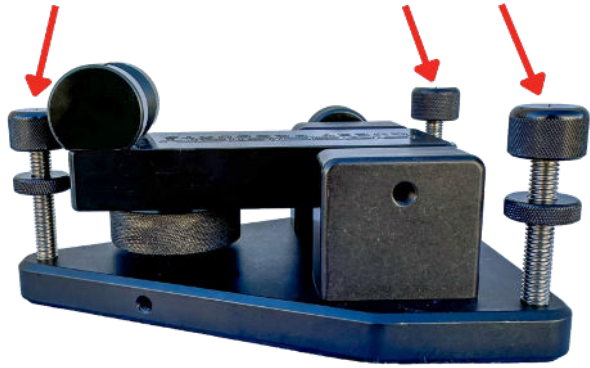


Grease Instructions

Occasionally you will need to grease the **threads** for the horizontal and vertical adjustments.


Vertical Adjustment Knob:

The threads for the vertical adjustment knob cannot be seen in this picture. You will need to unscrew the knob or remove it to apply the grease.

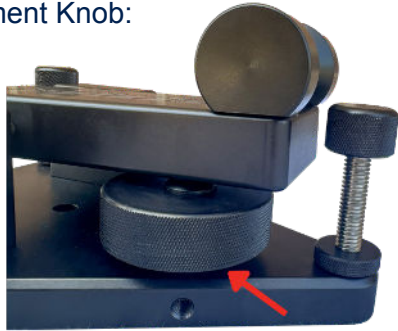

Horizontal Adjustment Knob:


The threads for the horizontal adjustment knob can be seen in this picture. You do not need to completely remove it in order to apply the grease.

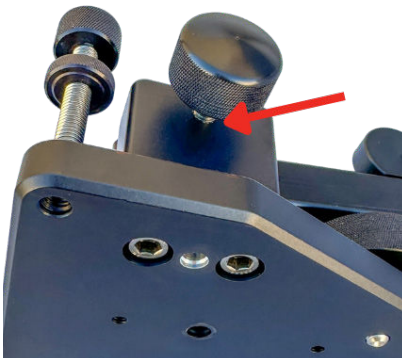


Adjusting Tension in the Vertical and Horizontal Adjustment Knobs

You can control the tension in the Vertical and Horizontal knobs by using a 1/8" allen key. Rotate clockwise to tighten and counterclockwise to loosen.

Vertical Adjustment Knob:

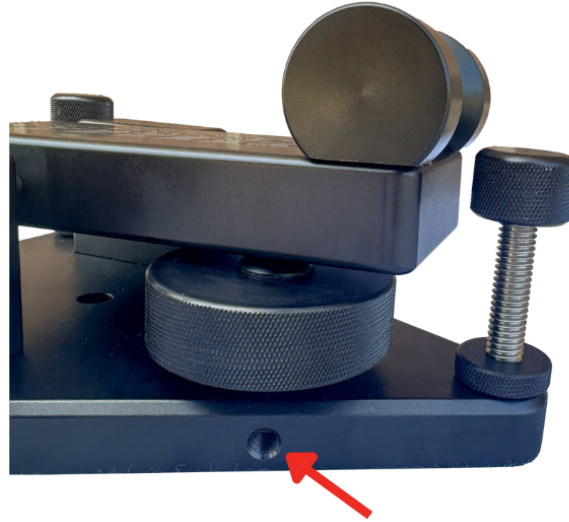


Horizontal Adjustment Knob:

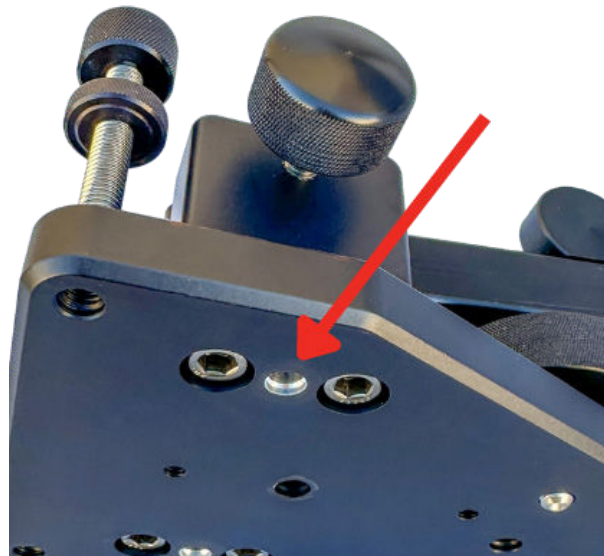


Left Handed Set Up

1. Remove the horizontal adjustment knob from post B.
2. Flip the rest over, remove the 2 screws under post A and loosen the 2 screws under post B.
3. Carefully, remove the spring from post A and then remove post A from the base plate.
4. Remove the arm from the bar.
5. Remove the dog bone from the arm.
6. Flip over the arm, and reattach the dog bone.
7. Unscrew the vertical adjustment knob to remove it, then replace it in the hole on the opposite side.
8. Reattach the arm to the bar.
9. Carefully, replace the spring into post B.
10. Reattach post A, tighten the screws in post B.
11. Screw in the horizontal adjustment knob to post A.
12. Move the screw and nylon ball from the middle hole underneath post B to the middle hole underneath post A. Shown in 12.1

12.1

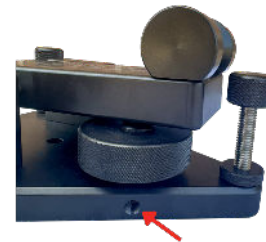

13.1

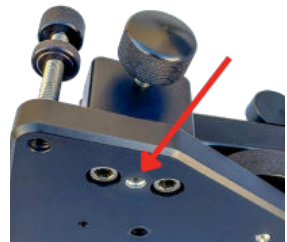

13. Move the screw and nylon ball from the hole on the side where the vertical adjustment knob was to the side where it is now. Shown in 13.1